



To Enable the Humidity Sensor:

1. On Main Screen Touch the Temperature Reading to Enter the Settings/Config Screen
2. Touch Config in the Upper Right Corner to get the Configuration Menu
3. Repeatedly Press the Next Button until P10 appears in the window; "Sensor #2 Enable"
4. Press the "+" Button to set the Sensor Value to "1" then Press Save Button at Lower Right
5. Press the "Exit menu" and the Controller will Reboot.
6. After Start up the Humidity Sensor will be enabled and a Humidity Reading will Appear to the Right of the Temperature Display.
7. Depending on the Assests you have enabled Additional humidity Settings will Appear in the Setting Menu.